

机型 Model	737-300	飞机注册号 A/C Reg	5N-MJA	颁发部门 Issue	培训部	修订日期 Revised Date	2020.07.18
区域 Zone	主轮舱 216/217	依据文件 Reference	AMM 33-32-00	版本 Rev	R0	预计工时 Est. MHrs	4H
编写/修订 Edited By	葛荣文	审核/日期 Review/Date	谈海军 /2020.08.04	审批/日期 Approve/Data	张玉/2020.08.05		

标 题: 拆装轮舱灯**SUBJECT: Wheel Well Lights - Replacement****说明/Comments:**

更换指定的轮舱灯

Replacement specified wheel well lights.

工卡中加*的步骤, 实施时由学员在驾驶舱或工作区域口述以及演示工作步骤。

The steps of adding*to the work card are narrated and demonstrated by the trainees in the cockpit or work area during the implementation.

计划信息/Planning Information**A.参考资料/References**

Reference	Title	Remark
N/A	N/A	N/A

B.航材/Expendable Part

FIG.ITEM	IPC-Ref	Part Name	P/N	QTY	Remark
N/A	N/A	N/A	N/A	N/A	N/A

C.工具设备/Tool Equipment


Reference	Description	QTY	Remark
N/A	十字螺丝刀	1	或等效工具
N/A	反光背心	AR	N/A
N/A	跳开关夹	AR	N/A

D.消耗品/Consumable Material

Reference	Description	Specification	QTY	Remark
N/A	抹布	N/A	AR	N/A
N/A	警告牌	N/A	AR	N/A
N/A	线手套	N/A	AR	N/A


工 作 内 容 CONTENTS	工作者 MECHANIC
<p>1. 概述 General</p> <p>本程序有如下工作: This procedure has these tasks:</p> <ul style="list-style-type: none"> ● 更换灯泡 Lamp Replacement ● 操作测试 Operational test 	
<p>任务 TASK 33-32-00-960-801</p> <p>2. 轮舱灯-灯泡更换 Wheel Well Light-Lamp Replacement</p> <p>(1) 拔除跳开关，并挂上禁止闭合警告牌: Open these circuit breakers and attach DO-NOT-CLOSE tags: P18-3板 SERVICE LIGHTING WHL WELLS P18-3PANEL SERVICE LIGHTING WHL WELLS</p> <p>(2) 取认所有灯光电门放置在关断位，并挂上禁止操作警告牌: Set the switch for the light to the off mode , attach DO-NOT-OPERATION tags:</p> <p>a) 一个电门在左侧主轮舱内。 One switch on the left wall of the main wheel well.</p> <p>b) 另一个电门在驾驶舱头顶面板。 Another switch on the overhead panel of the cockpit.</p> <p>(3) 完成以下步骤更换灯泡: Do these steps to replace the lamp:</p> <p>a) 松开相应的紧固件〔8〕。 Loosen the applicable fasteners〔8〕.</p> <p> 1) 如果安装了垫片〔7〕，拆下。 If washers〔7〕 are installed, remove them.</p> <p>b) 拆下相应的灯罩组件〔5〕。 Remove the applicable lens assembly〔5〕.</p> <p>c) 更换相应的灯泡〔6〕。 Replace the applicable lamp〔6〕.</p> <p> 注：拆灯泡时先往下按住灯泡，再逆时针旋转90度。 注：装灯泡时先往下按住灯泡，再顺时针旋转90度。</p> <p>d) 安装相应的灯罩组件〔5〕。 Install the applicable lens assembly〔5〕.</p> <p>e) 拧紧相应的紧固件〔8〕。</p>	

工 作 内 容 CONTENTS	工作者 MECHANIC
<p>Tighten the applicable fasteners [8] .</p> <p>1) 如果拆下了垫片 [7] , 安装。 If washers [7] were removed, install them.</p> <p>(4) 给飞机供电。 Supply Electrical Power.</p> <p>(5) 闭合跳开关, 并取下禁止闭合跳开关: CLOSE CB, remove DO-NOT-CLOSE tags: P18-3板 SERVICE LIGHTING WHL WELLS P18-3PANEL SERVICE LIGHTING WHL WELLS</p> <p>(6) 完成新灯泡测试: Do a test of the new lamp:</p> <p>a) 取下电门上禁止操作警告牌, 分别将电门放置在接通位。 Remove DO-NOT-OPERATION tags.Set the switch for the light to the on mode.</p> <p>1) 确认灯泡均可点亮。 Make sure the lamp comes on.</p> <p>b) 将电门放置在关断位。 Set the switch for the light to the off mode.</p> <p>1) 确认灯泡熄灭。 Make sure the lamp goes off.</p> <p>(7) 给飞机断电。 Remove Electrical Power.</p>	
<p>3. 收尾Close-Out :</p> <p>(1) 作业区域整理清洁。 Keep the working area clean and tidy.</p> <p>(2) 设施、设备归还到位。 Return the facilities and equipment back.</p> <p>(3) 构型要恢复正常 。 Restore to the normal configuration.</p> <p>(4) 落实三清点。 Implement the three checks.</p> <p>(5) 维修记录签署完成 。 Complete the signature of maintenance record.</p> <p style="text-align: center;">----- END OF TASK -----</p>	

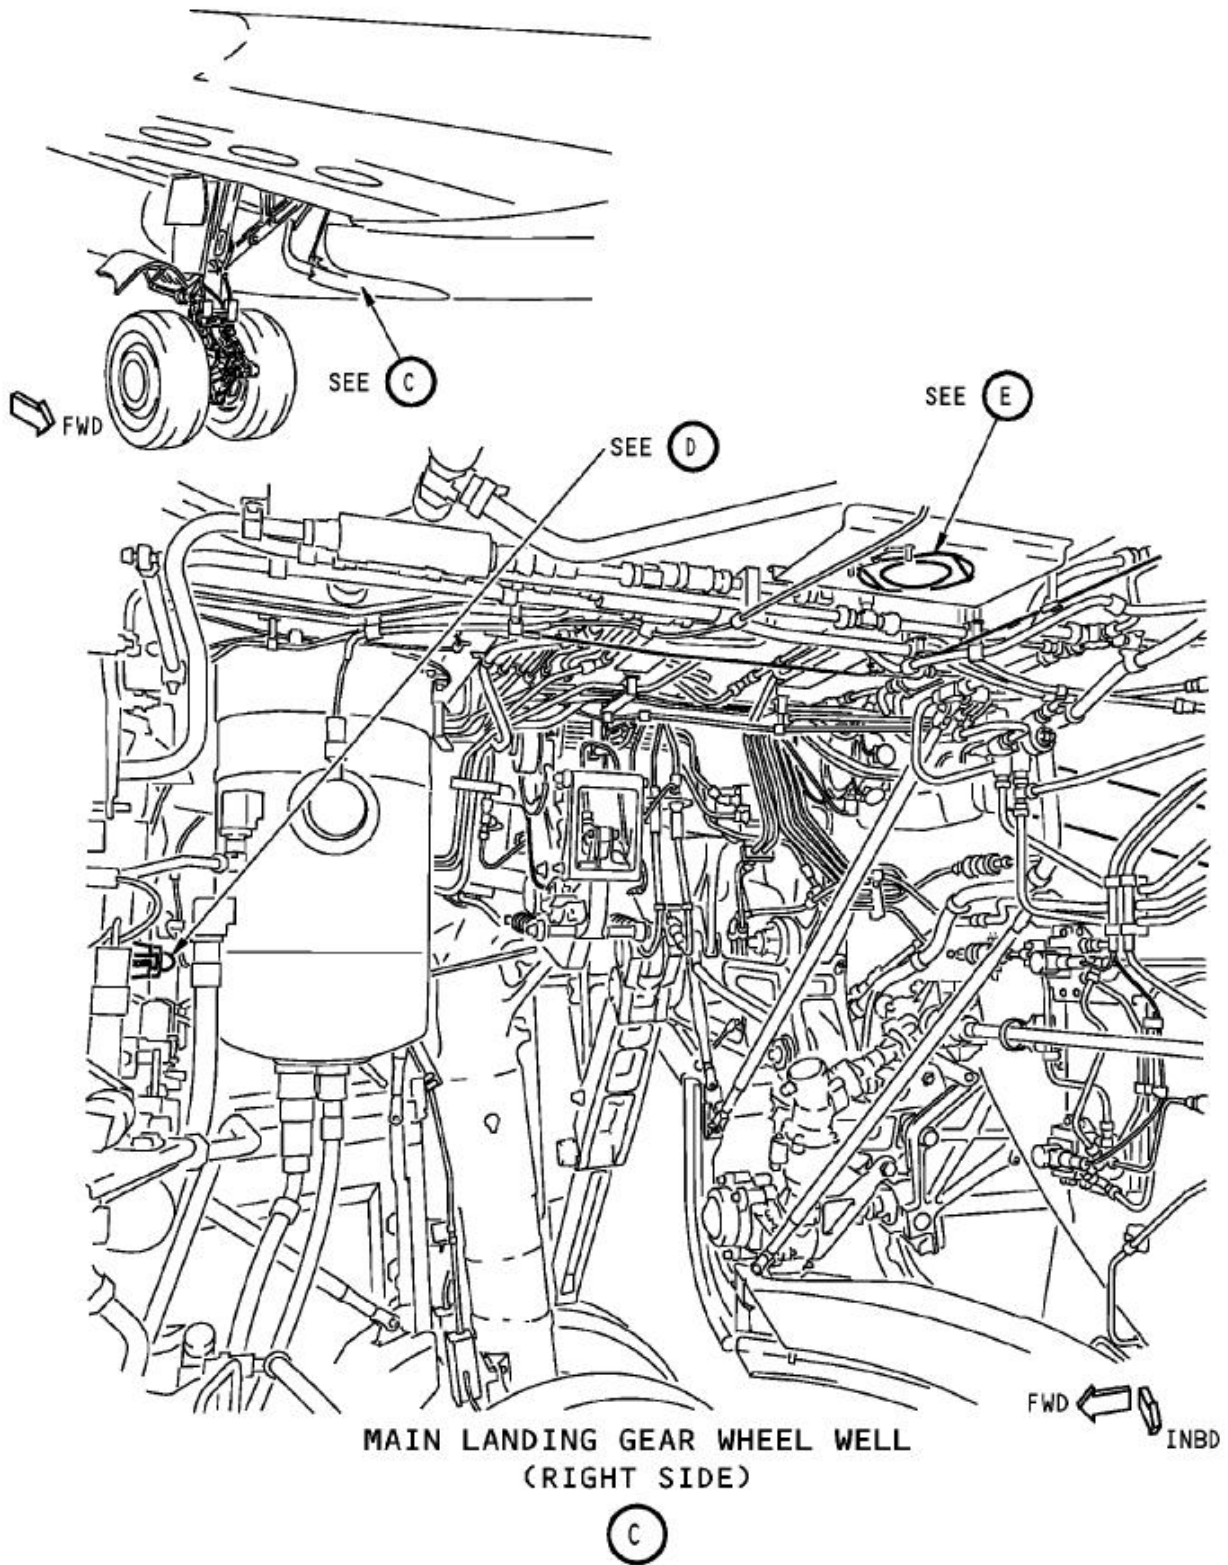

Wheel Well Light – Lamp Replacement

Figure 201 (Sheet 1 of 2)/33-32-00-990-801

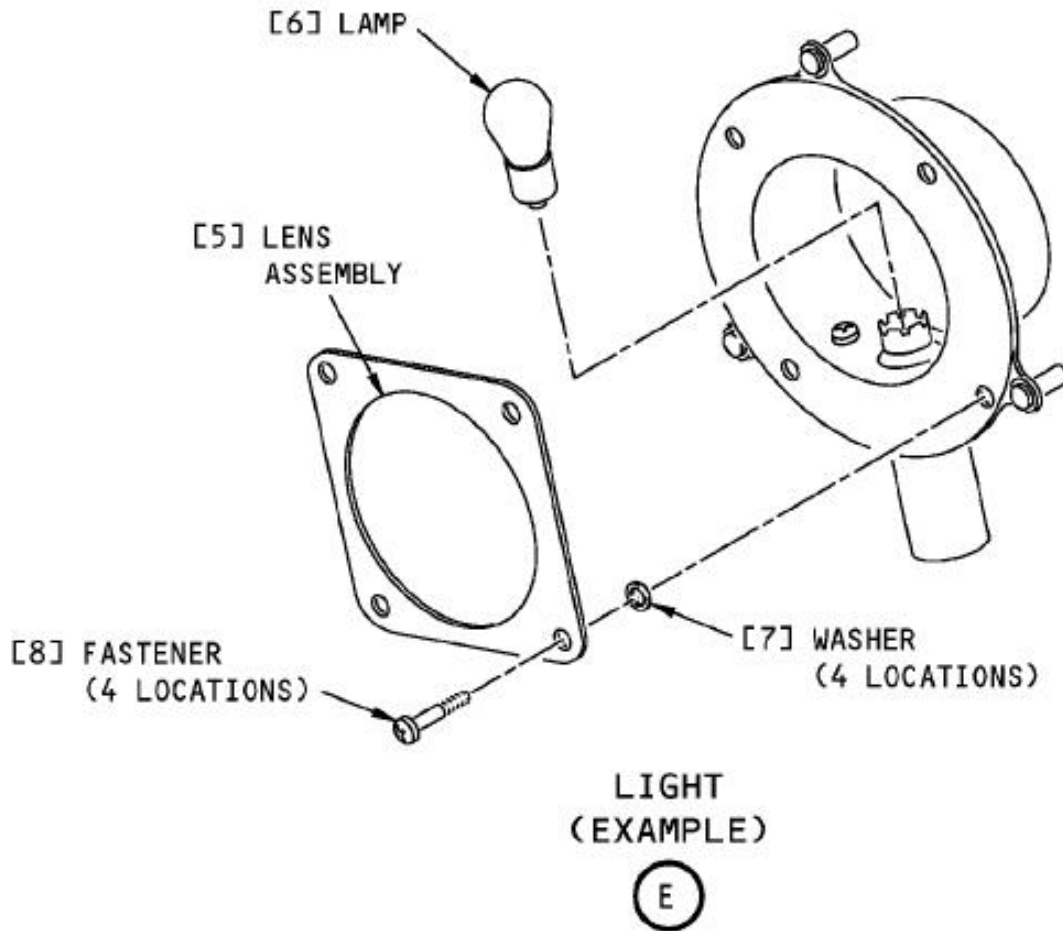

Wheel Well Light – Lamp Replacement
Figure 201 (Sheet 2 of 2)/33-32-00-990-801